



This Quick Operation Guide is NOT a substitute for the Operations & Maintenance Manual which MUST be read and understood, prior to operating, by anyone using or servicing the monitor. Failure to do so may result in serious injury or death.


Quick Config Display




Switch On




Quick Zero & Calibration (Optional)

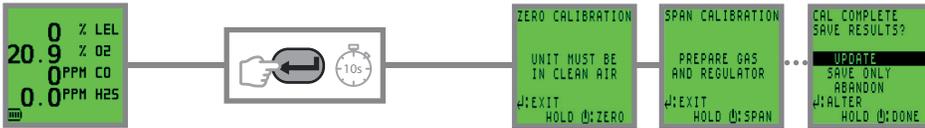


Manual Datalog

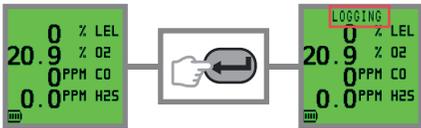


Pump

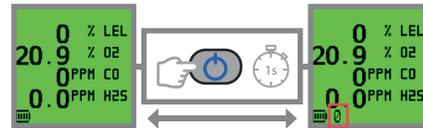

Self Test

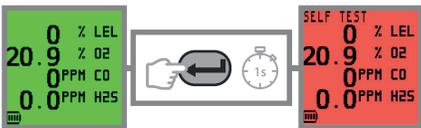

Alarm Acknowledge

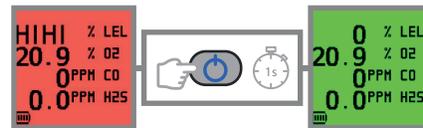


Calibration Overdue




Switch Off




Backlight MAX / MIN / STEL / LTEL

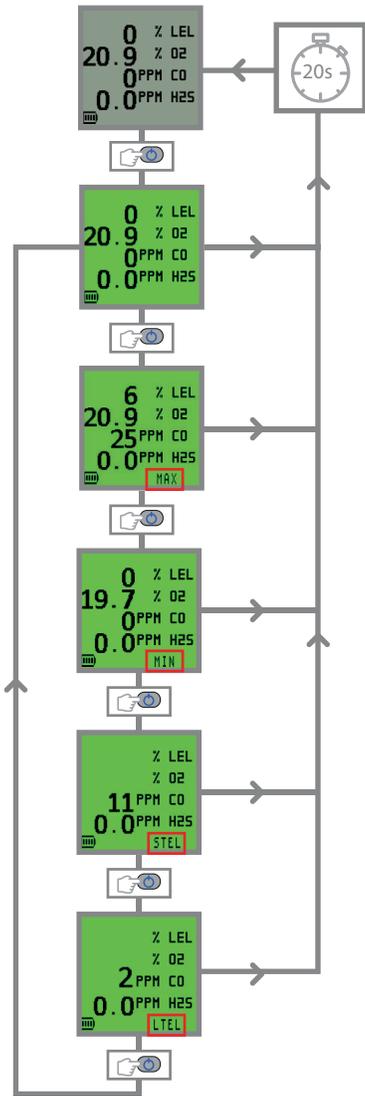

Reset MAX / MIN

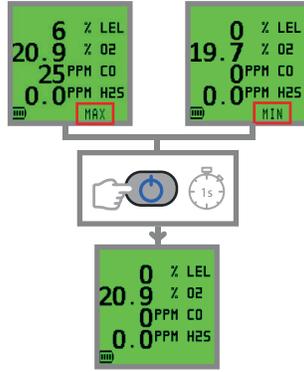

Zero Fault / Flow Fault

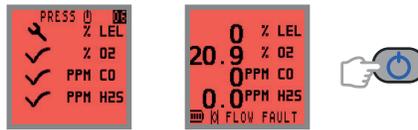

Charging

